



**STOVES**™

# Our Warranty

---



Should you need it . . . .

Inside the paperwork which has come with this appliance, there is a leaflet and card explaining the terms of our extended warranty and guarantee.

In order to apply for our five year guarantee, simply fill in the details on the card and post it off, this will register your appliance.

Should you wish to take out extended warranty, please fill in the details on the leaflet and post this off to:

Glen Dimplex Australia,  
Unit 2, 205 Abbotts Road  
Dandenong South  
Victoria 3175  
Australia

If your appliance is covered by the warranty and guarantee, you will not be billed for work undertaken should your appliance be faulty, terms and conditions do apply, so please read through the literature carefully.

Please ensure that you have available your appliances model number and serial number, there is a space at the back of this book for recording that information.

## **IMPORTANT NOTICE**

Please note the cooling fan fitted to this appliance is an integral part of its safety and functionality.

When the appliance is installed care must be taken that the cooling fans performance is not impeded by any objects coming into contact with it. (Installation pipes, leads etc) Care must also be taken that there is sufficient air flow at the rear of the appliance for the cooling fan to run at its optimum efficiency. (Particularly Built In appliances) See clearance dimensions in the installation section of the booklet.

During use the Appliance must never be disconnected from the Mains supply as this will seriously affect the safety and performance of the appliance, particularly in relation to surface temperatures becoming hot and gas operated parts not working efficiently.

The cooling fan is designed to run on after the control knob has been switched off to keep the front of the appliance and the controls cool until the appliance has naturally cooled itself.

# Contents

---

<b>User's Section</b> . . . . .	<b>2 - 18</b>
Introduction . . . . .	2
Be Safe - Not Sorry . . . . .	6
Functions . . . . .	8
Using the grills . . . . .	9
Grilling guide . . . . .	12
Using the main oven . . . . .	14
Main oven guide . . . . .	18
Roasting guide . . . . .	20
Traditional Fruit Cakes . . . . .	21
Roast Turkeys . . . . .	21
Programmer / Clock . . . . .	23
Cleaning . . . . .	30
 <b>Installation Instructions</b> . . . . .	 <b>33</b>
 <b>Technical Data</b> . . . . .	 <b>36</b>
 <b>Customer Care</b> . . . . .	 <b>Back cover</b>

*Please keep this handbook for future reference, and for anyone else who may use this appliance.*

## **Thank you for choosing this Stoves appliance!**

We hope the following information will help you to quickly familiarise yourself with the features of the appliance, and to use it successfully and safely.

Our policy is one of constant development and improvement. Strict accuracy of illustrations and specifications is not guaranteed. Modification to design and materials may be necessary subsequent to publication.

Please read the instructions in this handbook before using or installing this appliance.

This appliance is designed to fit into a standard 600mm wide housing unit with a minimum internal height of 580mm.

## **Your 1st year guarantee**

To fulfil the conditions of your guarantee, this appliance must be correctly installed and operated, in accordance with these instructions, and only be used for normal domestic purposes.

## **Environmental Protection**

We are committed to protecting the environment and operate an Environmental Management System which complies with BS EN ISO 1400.

## **Before using your appliance.**

Remove any protective polythene film and wash the oven shelves and furniture in hot soapy water to remove their protective covering of oil. Even so, when you first turn on the oven or grill you may notice a smell and some smoke.

## **Disposal of packaging**

- All our packaging materials are recyclable and environmentally friendly.
- Please help us to protect our environment by disposing of all packaging in an environmentally friendly manner.
- Please contact your local authority for the nearest recycling centre.

**Caution:** Packaging materials can pose a risk of suffocation - keep away from children.

## **Electrical connection**

Please refer to installation instructions for electrical connection.

In your own interest, and that of safety, make sure that any installation/disconnection is carried out by a competent person.

**Warning:** This appliance must be earthed.

Steam cleaners should not be used to clean this appliance.

## **When the power is turned on.**

As soon as the power is switched on, the oven will run a brief self check.

Once this has been done, the timer display in between the central and right hand control knob will begin to flash.

We recommend that you set the correct time of day before using the appliance for the first time.

If the time of day is not set after **one minute**, the timer display will show "00.01" as the time.

Please remember that this is a **24 hour** timer.

## **Manual operation**

Always make sure that the appliance is in manual cooking mode before using it. The Automatic programmer will not allow the oven/grill to be used if it is waiting to run a programme.

## **To change an oven light bulb**

Switch off the electricity to the appliance at the socket, to avoid the risk of electric shock.

Wait until the oven is cool, then remove the oven shelves.

The lens cover on the light can be removed by pulling away from the oven side. Unscrew the bulb and replace.

Please note that oven light bulbs are not covered by guarantee.

## **Cooling fan**

When any oven or grill heating function is selected the cooling fan will operate and continue to operate continuously and for 15minutes after the last heating

function has been switched off, unless any oven or grill heating element has not operated for longer than 90 seconds.

In this case the cooling fan will switch off immediately.

In all cases the cooling fan will switch on if it detects a temperature of 150°C or above and will not switch off until the temperature is 150°C or below.

## ***In the event of a power cut:***

1. Switch off the electricity supply to the appliance.
2. When the power returns, see the 'Programmer / Clock' section to 'Set the time of day'.

## **Condensation**

When hot moist air, created when cooking, meets a cooler surface such as an oven door, then the formation of condensation is normal, especially when cooking wet dishes at low temperatures.

Note: Automatic cooking will normally produce condensation when cooling down and food is still in the oven.

To minimise this:

Most importantly - pre-heat the oven on a high temperature before putting food into the oven

also - Cover the food you are cooking

Where possible cook wet food at higher temperatures

Do not leave food in the oven to cool down

## **When you are cooking, keep children away from the vicinity of the appliance.**

This product is designed as a domestic cooking appliance for the preparation and cooking of domestic food products, and should not be used for any other purpose.

- Remove all packaging, protective films and oils from the appliance before using for the first time.
- Make sure you read and understand the instructions before using the appliance.
- Keep electrical leads short so they do not drape over the appliance or the edge of the worktop.
- Keep all flammable materials (such as curtains, furnishings & clothing) away from the appliance.
- Parts of the appliance may be hot during or immediately after use. Care should be taken to avoid touching the heating elements inside the oven. Allow sufficient time for the appliance to cool after switching off.
- During use, the oven interior becomes hot, care should be taken to avoid touching heating elements inside the oven - children should be kept away.
- Never use the appliance for heating a room.
- Switch off the electricity supply before replacing the oven light bulb, to avoid the risk electric shock.
- Do not drape tea towels over the handle as this creates a fire hazard.
- When opening the appliance door, take care to avoid skin contact with any steam which may escape from the cooking.
- Do not place items on the drop-down door when it is open.
- Do not use the oven with the door inner glass panel removed.
- Do not use aluminium foil to cover the grill pan, or put items wrapped in foil under the grill, as this creates a fire hazard. The high reflectivity can also damage the element.
- Use oven gloves when removing hot food / dishes from the oven or grill. The oven / grill and utensils will be very hot when in use.
- Do not use foil on oven shelves or allow it to block the oven flue, as this creates a fire hazard, and prevents heat circulation.
- When cooking heavy items - eg; turkeys - do not pull the oven shelf out with the item still on the shelf. Unless the appliance is fitted with telescopic shelving.

All installation, servicing and maintenance work should be carried out by a competent person who will comply with current Regulations, Standards and Requirements. Always ensure the appliance is switched off after use.

## Important safety note:

This appliance has built in fail safe technology to prevent your appliance from overheating in the event of misuse or certain component failures such as cooling fan failure.

Should any of the above occur the appliance will automatically show "FAIL" "FAIL" on both displays.

You should switch off the power to the appliance and call our Customer Care Centre - details on the back page.

The appliance will automatically reset itself when the appliance is fully cooled down and power is restored.

## Child Lock

To activate the Child Lock Function, turn the central control knob anti-clockwise (towards the minus (-) symbol), and hold for 5 seconds.

The left hand display will show the following:












This means that the appliance functions **cannot** be turned on until the Child Lock Function is de-activated.

To unlock, turn the central control knob anti-clockwise (towards the minus (-) symbol), and hold for 5 seconds. The left hand display will then show the temperature of the oven cavity.



The Lock Function cannot be used while the appliance is turned on and cooking - attempting to use it will turn off the selected oven function.

# Functions

Symbol	Function / Feature	Main Oven and Grill
	Full Grill (conventional)	✓
	Half Grill (economy - inner element only)	✓
	Fanned grill	✓
	Conventional oven	✓
	Top heat only	✓
	Base heat only	✓
	Fanned oven	✓
	Defrosting	✓
	Intensive Bake	✓



**Caution:** Accessible parts may be hot when the grill is used, young children should be kept away.

## Using the grill

The 607MF is a combined oven and grill unit. You cannot use the oven and grill simultaneously.

## Preheating

This appliance performs at its best when it is preheated

To show it is preheating, the 'gr' flashes on the display.


Once preheating has finished, you will hear a short audible tone, and the 'gr' will stop flashing.

The grill is now ready for use.


## Aluminium foil

Using aluminium foil to cover the grill pan, or putting items wrapped in foil under the grill can create a fire hazard, and the high reflectivity can damage the grill element.

## Detachable grill pan handle

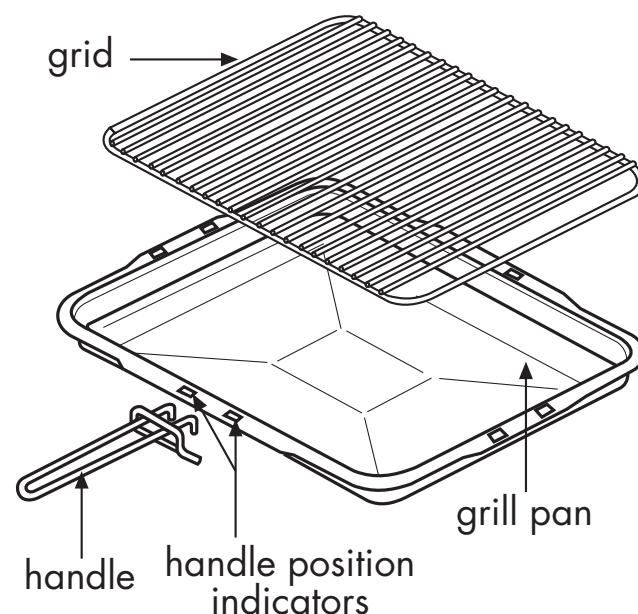

Place the handle over the edge of the grill pan, at the narrow side edges. Slide the handle to the centre, and locate between the handle position indicators.

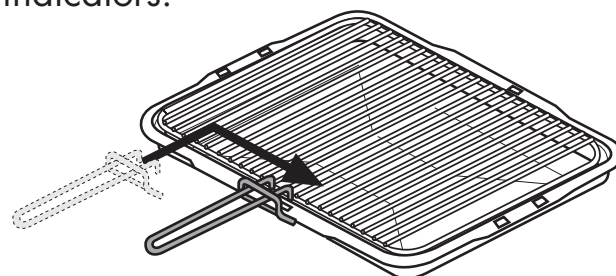

The handle should be removed from the pan during grilling, to prevent overheating.

The handle is designed for removing / inserting the grill pan under the grill when grilling.




If cleaning the grill pan when it is hot, use oven gloves to move it. Do not use the handle to pour hot fats from the grill pan.

Food for grilling should be positioned centrally on the grid.


## Using the Grill functions

The grill is controlled by the right hand control knob, the energy levels are shown on the left hand display, while the time of day is shown on the right hand display.

**Important note:** There are three grill functions available:

Full Grill		Door open when using
Half Grill		Door open when using
Fanned Grill		Door closed when using


To activate the grill, press the right hand control knob once. An audible tone will sound.

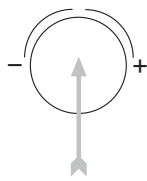


The full grill icon will come on flashing. This is the default setting.



You can select a different function by turning the right hand control knob anti-clockwise, or clockwise the function icons will remain flashing while you do this.

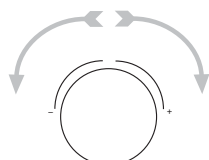


Once you have chosen which function you wish to use, press the control knob once, to confirm your choice. An audible tone will sound.

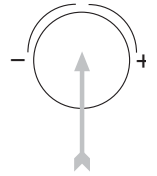

Your selected icon will remain lit and the default energy setting, gr:10 will be displayed on the Left hand display. This will flash while the grill preheats.

The grill will then start working, and the lights will switch on inside the cavity.

You can adjust the energy setting by turning the right hand controller either anti-clockwise or clockwise and adjusting between gr:1 - low, or, gr:10 - high.

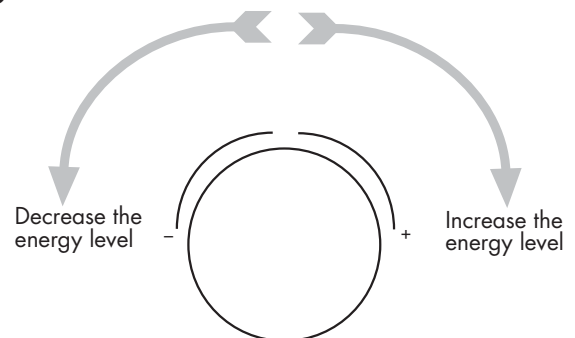

## To switch off.

Press the right hand control knob once cooking has finished. This will turn off the appliance and it will begin to cool down.

The main oven/grill left hand display reverts back to the temperature display of the main oven.

## **When using the grill**

You cannot use the automatic programmer with the grill, however the minute minder function can be used.

(see Programmer/Clock section)

Never leave the grill unattended for long periods of time when it is in use, if you do leave the appliance - set the minute minder as a reminder.

The grill is recommended for toasting bread, and grilling foods such as steaks, sausage and bacon.

If you use the fanned grill function, you do not need to turn thinner foods such as bacon, fish and gammon streaks.

Always remember when you use the grill that the Fanned grill function must have the door closed, while the Full and Half grill must have the door open.

### **Note:**




If you accidentally knock the grill control, the Full grill icon will come on flashing - however it will not activate the grill and after a short time will turn off again automatically.

## Grilling guide

The times given in the grilling guide are based on a **pre-heated** full grill used on gr:10. They are only approximate as differences in thickness, size of portion, and personal preference will influence the timing.

Shelf positions are counted from the bottom position up.

Food	Shelf position	Grilling times (mins)	
		conventional	fanned
<b>Bread</b>			
Toast; 3 - 4 rounds	9	2 - 4 mins	-
Teacakes	8	2 - 4 mins	-
Cheese on toast;			
- 4 rounds - full	8	3 - 5 mins	-
- 2 rounds - single	8	3 - 5 mins	-
<b>Fish</b>			
Fish fillets (6 - 8 oz)	7	6 - 10 mins	6 - 10 mins
<b>Poultry</b>			
Chicken fillets (6 - 8 oz)	6	15 - 25 mins	-
Chicken joints	6	20 - 40 mins	-
<b>Meat</b>			
Bacon Rashers	8	10 - 12 mins	6 - 8 mins
Sausages	7	15 - 20 mins	-
Steak - rare	8	7 - 10 mins	7 - 10 mins
- medium	8	10 - 15 mins	10 - 15 mins
- well done	8	15 - 20 mins	15 - 20 mins
Lamb chops	7	10 - 15 mins	-
Pork chops	6	12 - 20 mins	-
Gammon steaks	7	12 - 15 mins	10 - 15 mins

Grill Function		Pre-set Temperature °C Pre-set Energy Level	Recommended Uses
	Half Grill (economy)	gr:10 - highest grill setting	The half grill uses part of the element and is ideal for grilling smaller amounts of foods like steaks, bacon and toast. Use with the door open
	Full Grill (conventional)	gr:10 - highest grill setting	The full grill allows you to cook foods such as toast, bacon and steaks using heat from the element above. The full grill is ideal for large amounts of food. Use with the door open.
	Fanned Grill	gr:10 - highest grill setting	Suitable for thinner, flatter foods such as bacon, fish and gammon steaks. Foods do not require turning during cooking. Use with the door closed.

- These functions are all accessed by using the right hand control knob to switch on, select, confirm and switch off.
- The right hand control knob is also used to set the energy level.

## Using the oven

***Please read through these instructions carefully before using for the first time.***

Never put items directly on the base of the oven or cover the oven base with foil, as this can cause the base element to overheat.

## Preheating

This oven performs at it's best when preheated.

We recommend that you turn the oven on, select the function you require, and allow it to preheat before you put any foods or dishes in to cook.

While the oven is preheating, the temperature display will show the desired temperature and the °C symbol (shown below will flash.



Once the oven completes it's preheat the °C will stop flashing and an audible tone will be heard.

## To help the air circulate freely


- Position the shelves evenly within the oven and maintain a clearance from the oven roof and base.
- If more than one cooking dish or baking tray is to be used on a shelf, leave a gap of at least 25mm between the items themselves and the oven interior.
- Allow enough space between shelves for food that will rise during cooking.
- Do not place items on the oven base as this will prevent air from circulating freely.

**Caution: Accessible parts may be hot when the ovens are used, young children should be kept away.**

The oven is a multi-function oven. It has a variety of functions which can be used to achieve different results.

## Manual operation


Please ensure that the oven is not automatically programmed when you start cooking. A small indicator in the bottom right corner of the timer/clock will be lit if the auto programmer is active.

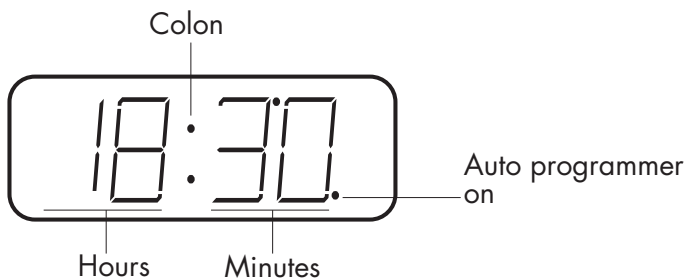

## To turn on the main oven

### Step 1 - Select the function


Press the left hand control knob once, a short audible tone will sound.

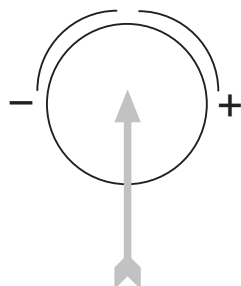


The oven will automatically default onto the fan oven.



To change the function turn the knob until the icon for the function you require is illuminated.

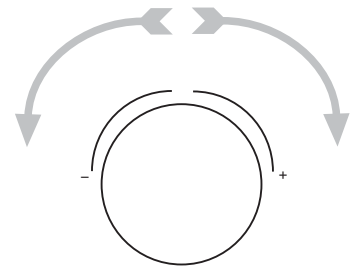

Press the control knob again to confirm your choice a short audible tone will sound

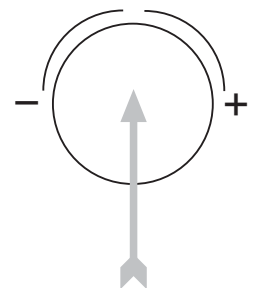

The oven has pre-set temperatures programmed in - detailed on page 21. Details about the temperature settings, and how to adjust them are on the following page.

## Step 2 - Set the main oven control


Once the main oven function has been selected and confirmed, the preset temperature will show in the left hand display.

To adjust the temperature, just turn the knob until the display on the right reads the temperature you require.

### 1) Pre-set temperature



### 2) Turn

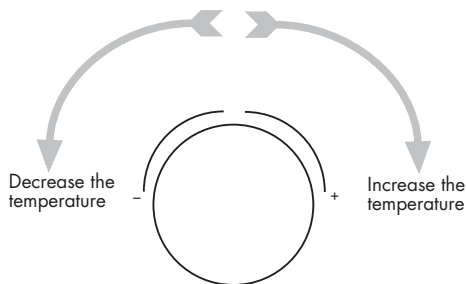

### 3) Adjusted temperature



## Note:

If you accidentally knock the oven control, the Fanned oven icon will come on flashing - however it will not activate the oven and after a short time will turn off again automatically.

## Automatic operation

See 'Programmer / Clock' section.



## Defrosting and cooling

### Important notes:

To **defrost** frozen foods, place food in the centre of the oven and close the door.

To **cool** foods after cooking prior to refrigeration or freezing, place food in the centre of the oven with the door open.

### Be safe



- Do not defrost stuffed poultry using this method.
- Do not defrost larger joints of meat or poultry over 2kg / 4lb using this method.
- Never place uncooked food which is to be defrosted next to cooked food which is to be cooled, as this can lead to cross contamination.

### Defrosting times

Small or thin pieces of frozen fish or meat - eg; fish fillets, prawns and mince will take approximately 1 - 2 hours. Placing the food in a single layer will reduce the thawing time.

A medium sized casserole or stew will take approximately 3 - 4 hours.



A 1.5kg / 3lb chicken will take approximately 5 hours - remove the giblets as soon as possible.

Dish	Recommended Temperature °C			Approx Cook Time (mins)
	Conventional 	Intensive 	Shelf	
Scones	215	200	6	8 - 15
<b>Cakes</b>				
Small cakes	180	175	4	20 - 25
Whisked sponge	190	175	5	20 - 25
Swiss roll	200	190	6	10 - 12
Victoria sandwich (2 x 180mm / 7" per shelf)	180	160	5	20 - 30
Genoise sponge	180	160	5	25 - 30
Madeira (180mm / 7")	170	150	5	1 - 1¼ hrs
Semi rich fruit cake (205mm / 8")	150	135	3	2½ - 3 hrs
Dundee cake (205mm / 8")	150	135	3	2½ - 3 hrs
<b>Pastry</b>				
Flaky / Puff	220	200		15 - 45 mins.
Shortcrust	200	180		Depending on
Choux	200	180		recipe and type
Plate tarts (2 x 180mm / 7")	200	180		of filling.
<b>Biscuits</b>				
Shortbread rounds	180	160	6	10 - 20
Nut brownies	180	160	5	35 - 40
Brandy snaps	190	170	5	8 - 12
Flapjacks	190	180	5	25 - 40
Ginger nuts	180	160	5	15 - 20

*Notes:*

Shelf positions in an electric oven are counted from the bottom position up.

For best results when using the conventional oven cooking function, only one tray of cakes or scones should be baked. When baking more than one tray, the fanned oven cooking function should be used.

Dish	Recommended Temperature °C			Approx Cook Time (mins)
	Conventional 	Intensive 	Shelf	
<b>Puddings</b>				
Rice pudding (1 / 2 pint dish)	150	140	3	1¾ - 2hrs
Baked custard (1 / 2 pint dish)	170	150	3	50 - 60
Bread & butter pudding (1 / 2 pint dish)	170	150	3	45 - 1hr
Hot soufflé	180	160	5	30 - 45
Fruit crumble	200	185	5	40 - 1hr
<b>Miscellaneous</b>				
Yorkshire pudding (large)	220	200	10	40 - 45
Yorkshire pudding (small)	220	200	10	15 - 20
Toad in the hole	220	220	10	40 - 45
Bread (2 x 1lb loaves)	220	200	5	20 - 30
Bread rolls	220	200	5	10 - 15


## Roasting guide

Frozen meat should be thoroughly thawed before cooking. For large joints, it is advisable to thaw overnight.

Frozen poultry should be thoroughly thawed before cooking (unless packaging advises otherwise). The time required depends on the size of the bird - eg; a large turkey may take up to 48 hours to thaw.

Adjust the shelf positions so the meat or poultry will be in the centre of the oven.

The times given in the roasting guide are only **approximate** because the size and age of the bird will influence cooking times, as will the shape of the joint and the proportion of bone.

<b>Cook in oven at:</b> <b>200°C  conventional oven</b>		<b>Approximate cooking time (preheated oven)</b>
<b>Beef</b>	Rare Medium Well done	20 minutes per 450g (1lb) plus 20 minutes 25 minutes per 450g (1lb) plus 25 minutes 30 minutes per 450g (1lb) plus 30 minutes
<b>Lamb</b>	Medium Well done	25 minutes per 450g (1lb) plus 25 minutes 30 minutes per 450g (1lb) plus 30 minutes
<b>Pork</b>		35 minutes per 450g (1lb) plus 35 minutes
<b>Poultry</b>		20 minutes per 450g (1lb) plus 20 minutes

## Traditional fruit cakes

It should be remembered that ovens can vary over time, therefore cooking times can vary, making it difficult to be precise when baking fruit cakes.

It is necessary therefore, to test the cake before removal from the oven. Use a fine warmed skewer inserted into the centre of the cake. If the skewer comes out clean, then the cake is cooked.

- Do not attempt to make Christmas cakes larger than the oven can cope with, you should allow at least 25mm (1 inch) space between the oven walls and the tin.
- Always follow the temperatures recommended in the **recipe**.
- To protect a very rich fruit cake during cooking, tie 2 layers of brown paper around the tin.
- We recommend that the cake tin is not stood on layers of brown paper, as this can hinder effective circulation of air.
- Do not use soft tub margarine for rich fruit cakes unless the recipe specifically recommends it.
- Always use the correct size and shape of tin for the recipe quantities.

## Roast turkey







Roasting turkey involves cooking two different types of meat - the delicate light breast meat, which must not be allowed to dry out, and the darker leg meat, which takes longer to cook.

The turkey must be roasted long enough for the legs to cook, so frequent basting is necessary. The breast meat can be covered once browned.

- Always make sure that the turkey is completely thawed and that the giblets are removed before cooking.
- Turkey should be roasted at 200°C - *Conventional* / 180°C - *Fanned* for 20 minutes per 450g (1lb), plus 20 minutes, unless packaging advises otherwise.
- The turkey can be open roasted, breast side down, for half of the cook time, and then turned over for the remainder of the cooking time.
- If roasting turkey covered with foil, **add** 5 minutes per 450kg (1lb) to the cooking time.

To test if the turkey is cooked, push a fine skewer into the thickest part of the thigh. If the juices run clear, the turkey is cooked. If the juices are still pink, the turkey will need longer cooking.

# Using the Main Oven

Main Oven Function		Temperature °C	Recommended Uses
	Base Heat Only	200 °C	Used to finish of the bases of foods following on from using the conventional or fanned modes. The base heat can be used to provide additional browning to the bases of foods such as pizza, quiches and pies. This function should be used towards the end of cooking.
	Top Heat Only	200 °C	Used to finish off the tops of foods following cooking using the conventional or fanned modes. The top heat setting can be used to provide additional browning for the tops of foods such as cauliflower cheese or lasagna. This function should be used towards the end of cooking.
	Conventional Oven	200 °C	The zones of heat throughout the oven make this function suitable for traditional roasting. Place the meat towards the centre of the oven, roast potatoes towards the top and puddings towards the base.
	Intensive Bake	220 °C	Suitable for foods with a high moisture content such as quiche, cheesecake and bread. Eliminates the need to blind bake pastry.
	Fanned Grill	gr:10 - highest heat setting	Suitable for thinner, flatter foods such as bacon, fish and gammon steaks. Foods do not require turning during cooking. Use with the door closed.
	Defrost	dEF - no temperature	To defrost frozen foods - use with the oven closed. To cool foods after cooking and prior to refrigeration - use with the door open.

- These functions are all accessed by using the left hand control knob to switch on, select, confirm and switch off.
- The left hand control knob is also used to set the temperature / energy level.

## Introduction

This timer may differ from any timer you have used before. Please read through these instructions carefully, and familiarise yourself with the timer, before you start to use it, this will ensure that it is set up correctly.

The timer must show the correct time of day if you want to make the most of it's features, so please make sure that this is done first of all.

The centre knob controls all of the timer functions.

## Tips and hints


In order to achieve the best results possible, we recommend:

- Using the minute minder whenever you leave food items in the oven unattended for any length of time.
- When using the automatic functions for the first time, it is recommended that you remain in the house, to make sure that the timings and settings are correct.
- Select foods which are as fresh as possible, and as cold as possible - ie; preferably straight from the refrigerator when automatic cooking.
- Choose foods which are suitable for cooking from a cold start, as some dishes will be affected by being left uncooked, at room temperature, perhaps for several hours, especially when the weather is hot.
- Make sure that meat, poultry and uncooked food are thoroughly thawed before placing them in the oven.
- Cover dishes with lids or foil, as they may be left standing in the oven for some time before cooking.
- Never place warm food in the oven for delayed cooking - eg; stews prepared by frying meat first must be thoroughly cooled before placing in the oven.
- Do not cook dishes containing left over cooked meat or poultry, or pastry dishes with wet fillings, as they are not suitable for automatic cooking.
- Do not put food items intended for delayed cooking into a warm oven - allow the oven to cool before setting for delayed cooking.
- Do not over-fill dishes containing liquids, as they might boil over.
- Never leave food in the oven to cool slowly after cooking, serve immediately or refrigerate.

## Setting the time of day

*Note: This is a 24 hour clock.*

Ensure that the power is switched on to the appliance.

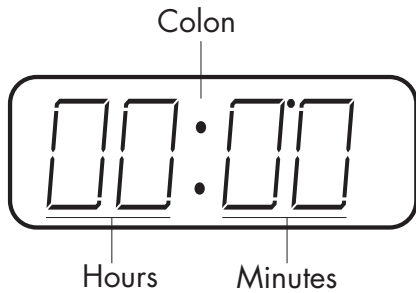


The timer display will show 00.00, and the first two digits (hours) will begin to flash.



This indicates that you should set the hour.


Use the centre control knob to set the correct time, turning the knob clockwise will increase the time and anti clockwise will decrease the time. To confirm the correct hour once you have set it, press the centre control knob to confirm.

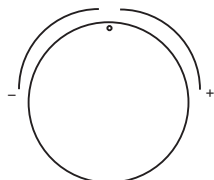

Once the hour has been set, the last two digits (minutes) will begin to flash indicating that they should be set.



Set the minutes passed the hour in the same way as you set the hour.

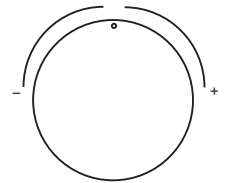

Once the correct minutes are set, press the centre control knob to confirm


Once the time is set, the colon in the centre will begin to flash regularly, but the time of day will remain lit.



## To adjust the time of day

Should you need to adjust the time of day the procedure below should be followed.

Turn the centre control clockwise, and hold for around 5 seconds. You will hear a short audible beep accompanied by the hours digits flashing.

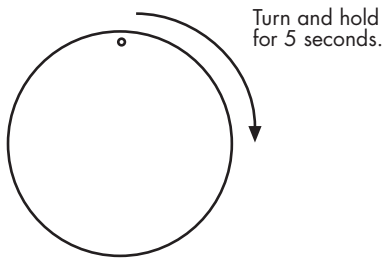

Use the same instructions as detailed on the previous page to adjust the time accordingly.


## Setting the minute minder

Press the centre control knob, to access the timer functions. The minute minder is the first function (default).

Press the control knob again. A tone will sound, confirming the minute minder.

The auto programmer indicator will illuminate to confirm that the minute minder is selected. The default number of minutes is 30 but you can adjust the minutes required to a maximum of 99 minutes, or a minimum of

00 minutes by turning the control knob clockwise - to increase the time, or turning it anti-clockwise - to reduce the time.

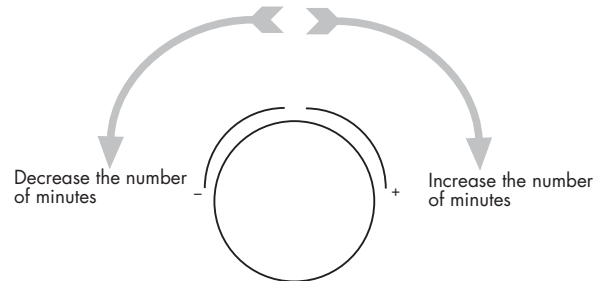

The minute minder will then begin to count down.

Once the countdown has finished, the alarm tone will sound.

To stop the tone sounding press and release the centre control knob. .

## Cancelling the minute minder

To cancel the minute minder at any time at all, simply press and release the centre control knob.


## Semi Automatic Cooking

**Definition:** Semi Automatic, alarmed feature with automatic switch off for the main oven functions only, has two different operating modes:-

**The duration method** - allows you to set the oven for a specific length of time which will countdown before automatically switching off and sounding alarm e.g. If food needs 2 hours to cook, then it is possible for you to set the oven to turn off after 2 hours cook time.

Press centre control knob to initiate timer functions. The minute minder icon will begin flashing.

Select cook time symbol function by rotating centre control knob until the cook time symbol is flashing then confirm selection by pressing centre control knob again.

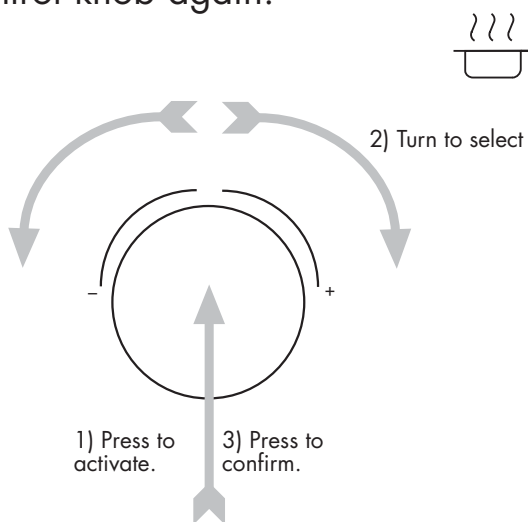

The display will show 00:00 hours


with "00".00 flashing.

Enter the hours by rotating the centre control knob clockwise (+) or anti-clockwise (-) to the required hour setting, then confirm by pressing the centre control knob again.

The minutes, 00:"00" will now start to flash, set the minutes in the same way as you set the hours and confirm by pressing the centre control knob

The timer end time icon is now illuminated, however you do not need to enter an end time. Just press the control knob twice to skip past it.

The timer set indicator on the bottom right hand side of the timer display illuminates confirming timer function has been set correctly and will remain illuminated until the program has finished, or it is cancelled.

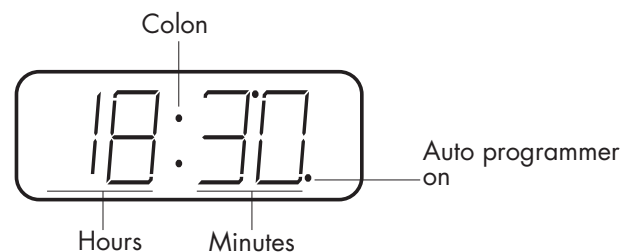

The display will alternate between the time of day, and the remaining cooking time throughout the program.

Once the time has run down, a tone will sound and the appliance will switch itself off.

### To Cancel:


Press the centre control knob at any time.

## Semi Automatic Cooking (Continued)

**End Time method** – allows you to set a specific time of day you want the oven to automatically switch off and sound the alarm e.g. if you start cooking food and you wish it to automatically switch off at 16.00hrs, you can program the end time in and the appliance will automatically switch off at this time sounding an alarm.

Press centre control knob to initiate timer functions. The minute minder icon will flash.

Select end time symbol function by rotating centre control knob until end time symbol is flashing, then confirm your selection by pressing centre control knob once.

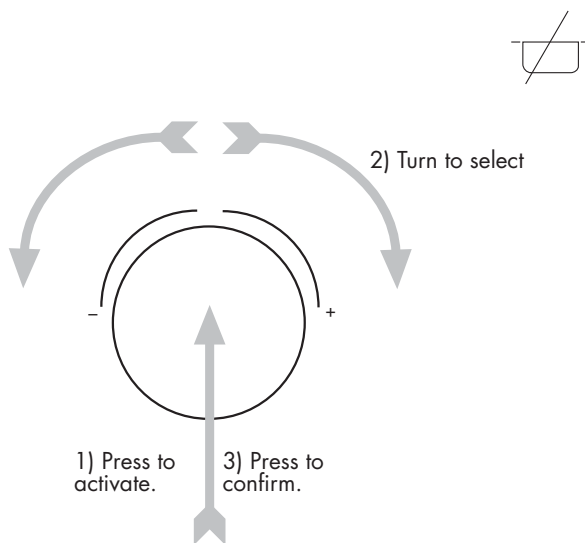


The display will show 00:00 with the "00":00 flashing. Enter the end time hours by rotating

the centre control knob clockwise (+) or anticlockwise (-) to the required hour setting, then confirm by pressing the centre control knob once.

### Always remember that this is a 24 hour clock.

The minutes, 00:"00" will now start to flash - set the minutes past the hour in the same way as you set the hour.

The timer set indicator on the bottom right hand side of the timer display illuminates confirming timer function has been set correctly and will remain illuminated until the program has finished, or it is cancelled.

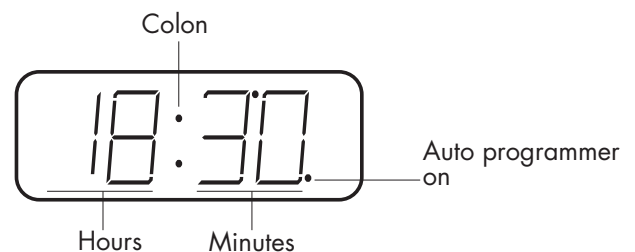

The timer display will alternate between the time of day, and the end cooking time while the program is running.

When end time is reached an alarm will sound and the appliance will switch itself off. To stop the tone sounding - press the centre control knob.

### To cancel:

Press the centre control knob at any time.


## Fully Automatic Cooking

**Definition:** Fully automatic cooking allows you to use both end time and duration cooking together. The oven calculates a start time from the duration and end times and automatically turns itself on and off.

Note 1:- The main oven function can be set before or after programming the timer and can be adjusted at any time

Press centre control knob to initiate timer functions. The minute minder icon will flash.


Use the centre control knob to select the cook time icon.

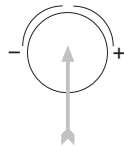


Then press the centre knob to confirm your choice.




The display will show 00:00 with the hours flashing "00":00.

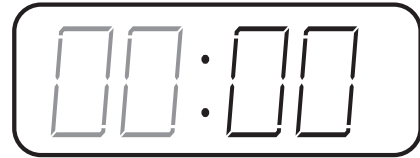

Enter the cooking duration hours by rotating the centre control knob clockwise (+) or anticlockwise (-) to the required hour setting, then confirm by pressing the centre control knob once.

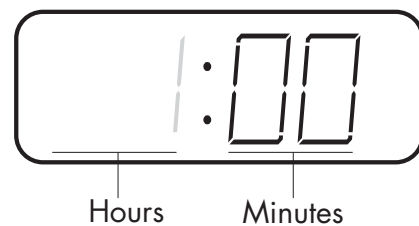


The minutes (00:'00') now start to flash- set the minutes in the same way as you set the hours then press the centre control knob to confirm.

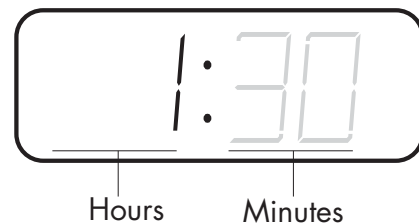


## Fully automatic cooking cont'd


The timer end time icon is now illuminated and the timer hours is flashing (':00':00).

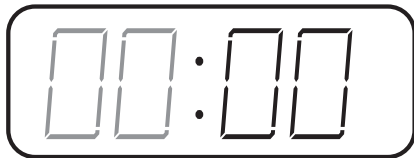

Enter the hour you would like the appliance to turn off at by turning the control knob. Press the centre control knob once, to confirm this.

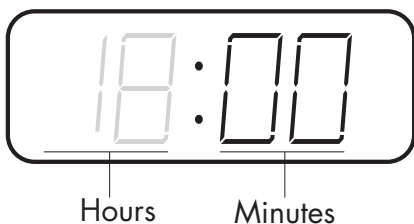


The minutes (':00') now start to flash. Enter the minutes past the hour in the same way and press the centre control knob to confirm.

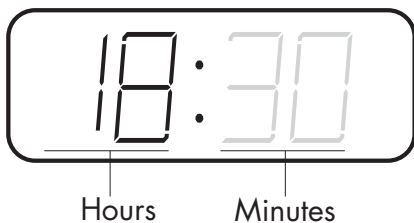

**Always remember that this is a 24 hour clock.**

The timer set indicator on the bottom right hand side of the timer display illuminates confirming timer function has been set correctly and will remain illuminated until the program has finished, or it is cancelled.

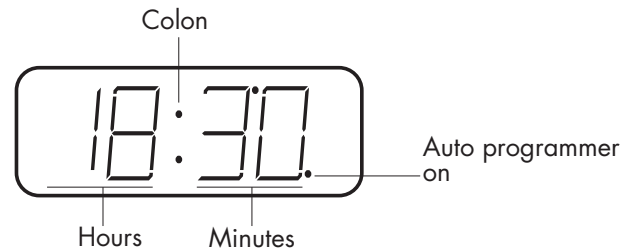

Once the duration and end time have been set, the programmer will work out the start time.

Once the program has finished running, a tone will sound and the appliance will turn itself off. To stop the tone, press the centre control knob.

### To cancel:

Press the centre control knob at any time.

**Caution: Any cleaning agent used incorrectly may damage the appliance.**

**Always let the oven cool before cleaning.**

Some cooking operations generate considerable amount of grease, this combined with spillage can become a hazard if allowed to accumulate on the oven through lack of cleaning. In extreme cases this may amount to misuse of the appliance and could invalidate your guarantee.

It is recommended that the appliance is cleaned regularly after open roasting.

Do not use caustic, corrosive or abrasive cleaning products, products containing bleach, coarse wire wool or any hard implements, as they will damage the surfaces.

All parts of the appliance can be safely cleaned with a cloth wrung out in hot soapy water.


Do not use steam cleaners on any part of this appliance.

## Chrome plated parts

OVEN SHELVES & OVEN SHELF RUNNERS,  
GRILL PAN TRIVET

Do not use abrasives or polishes, use a moist soap pad - eg; "Brillo". These items may also be cleaned in a dishwasher.

*Note:* Oven shelf runners can be removed for cleaning. Grasp the runners, and slide out of the hanging holes as shown.

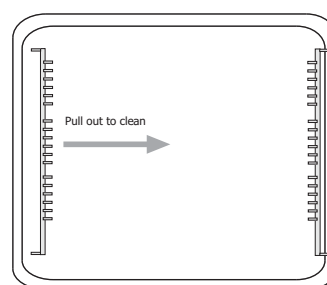

## Pristine enamel parts

OVEN CAVITIES, GRILL PAN & ROASTING TINS

We recommend that the appliance is cleaned after open roasting. Use of a trivet in a roasting tin when roasting will help reduce fat splashing.

Use a few drops of washing up liquid in hot water. Wipe the surfaces with a clean cloth wrung out in hot soapy water.

If larger splashes of fat do not readily disappear, use a mild cream cleaner- eg; "Cif".

Stubborn marks may be removed with a moistened soap filled pad e.g: "Brillo"


## Glass parts

### FACIA PANEL & DOOR PANELS

Use hot soapy water on stubborn marks.


Use a mild cream cleaner. Rinse thoroughly and dry with a soft cloth. Do not use abrasive cleaners or polishes.

To remove the glass panel for cleaning, open the door to the door stop position (about 30° open), hold the top and bottom edges of the panel and slide out. Note that if the door is opened fully when removing the inner door glass panel, the door may spring shut.

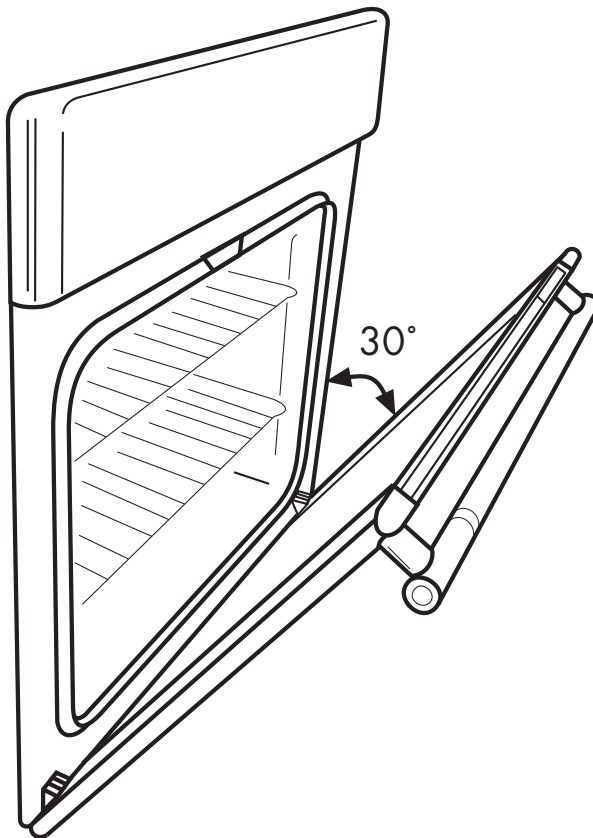

Door stop position

**Important:** if the inner door glass panel is removed for cleaning, it must be replaced the right way up as shown, and pushed fully in to the stop position.

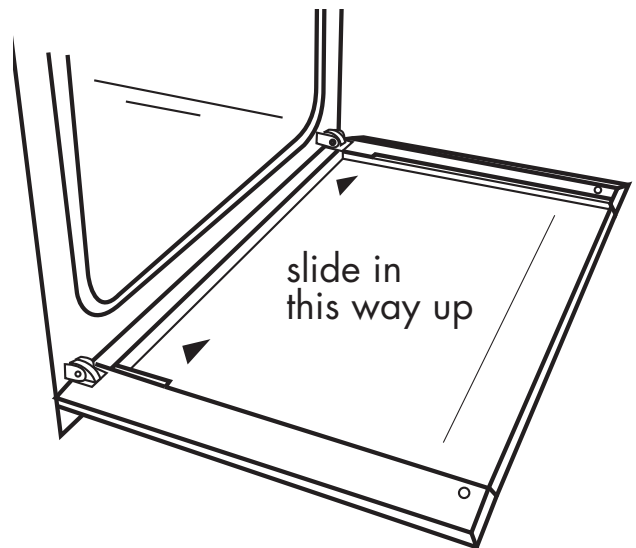

## Notes: Glass panels

To meet the relevant Standards of Domestic cooking appliances, all the glass panels on this appliance are toughened to meet the fragmentation requirements of BS3193. This ensures that, in the unlikely event that a panel breaks, it does so into small fragments to minimise the risk of injury.

Please take care when handling, using or cleaning all glass panels as any damage to the surfaces or edges may result in the glass breaking without warning or apparent cause at a later date. Should any glass panel be damaged, we strongly recommend that it is replaced immediately.

## **Painted, plastic and metal finish parts**

DOOR FRAME & HANDLE, CONTROL KNOB

Only use a clean cloth wrung out in hot soapy water.

## **Stainless Steel surfaces** (stainless steel finish models only)

FACIA PANEL, HANDLES, DOOR PANELS

Only use a clean cloth wrung out in hot soapy water, and dry with a soft cloth.

Stubborn marks can be removed using a stainless steel cleaner. We recommend that you clean the whole of the stainless steel area to maintain a uniform finish.

Do not use undiluted bleach or any products containing chlorides as they can permanently damage the steel.

Extra care should be taken when cooking food in salted water. Some foods are corrosive - eg; vinegar, fruit juices and especially **salt** - they can mark or damage stainless steel if they are left on the surface. Turn off and wipe any spillage immediately, taking care to avoid skin contact with any hot surface or spillage.

Sharp objects can mark the surface of stainless steel, but marks will become less noticeable with time.

To maintain the finish of the stainless steel, or to remove any greasy marks, wipe the stainless steel surface sparingly with a minimum amount of Baby Oil and kitchen paper.

Do not use cooking oils, as these may contain salt, which can damage the stainless steel surface.




## Step 1: Prepare installation

### Do not lift the oven by the door handle.

Whilst every care is taken to eliminate burrs and raw edges from this product, please take care when handling - we recommend the use of protective gloves during installation.

Please note that the weight of this appliance is approximately **27kg** (unpacked). Take care when lifting it into the housing unit - always use an appropriate method of lifting.

If the appliance is to be installed near to a corner where the adjacent cabinets run at right angles forward of the appliance, there must be a gap of at least 90mm between the appliance and the cabinets, to prevent overheating of the cabinets.

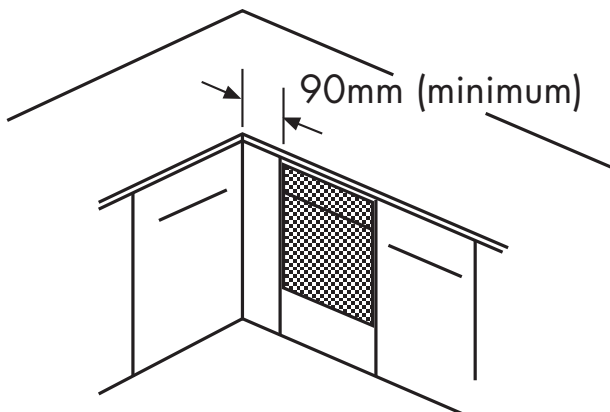


1. Remove the fixing screws from the polythene bag on the top of the appliance, but leave the appliance in the base tray packaging until you are ready to install it.

*Note:* When removing the appliance from the base tray packaging, care should be taken to ensure the outer frame trim is not damaged.

2. (i) When installed in a typical 600mm deep built in housing unit, the false back should be removed from the housing unit to provide the necessary depth for installation.

(ii) When the false back is removed, it is normally the case that the support shelf for the appliance leaves a gap between the back edge and the wall of approximately 80mm.

(iii) If no gap occurs between the back edge of the shelf unit and the wall behind the unit, we recommend that a gap of at least 30mm is made by shortening the shelf.

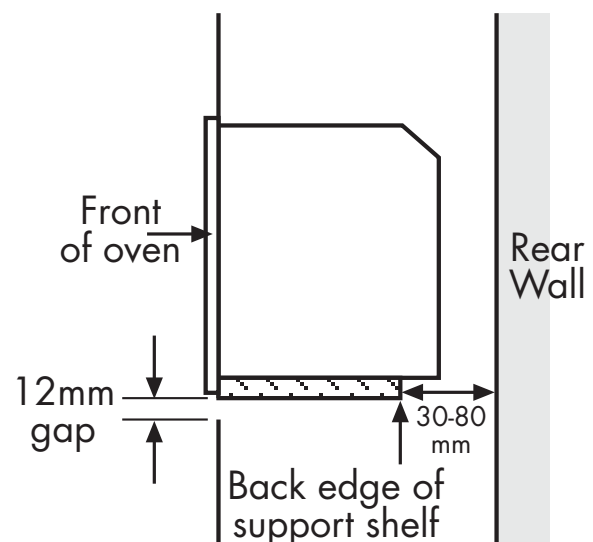


The appliance is designed to fit into a standard 600mm wide housing unit, with minimum internal dimensions as shown.

Please note that all dimensions and sizes given are nominal - some variation is to be expected.

590mm is to the underside of the worktop when the appliance is built under. A minimum of 580mm to the underside of the panel above is required when the appliance is installed into a tall housing unit.

## Installing the appliance under a worktop


Where the appliance is installed under a worktop, with a hob installed above it, the installation instructions for the hob must be read in conjunction with these instructions.

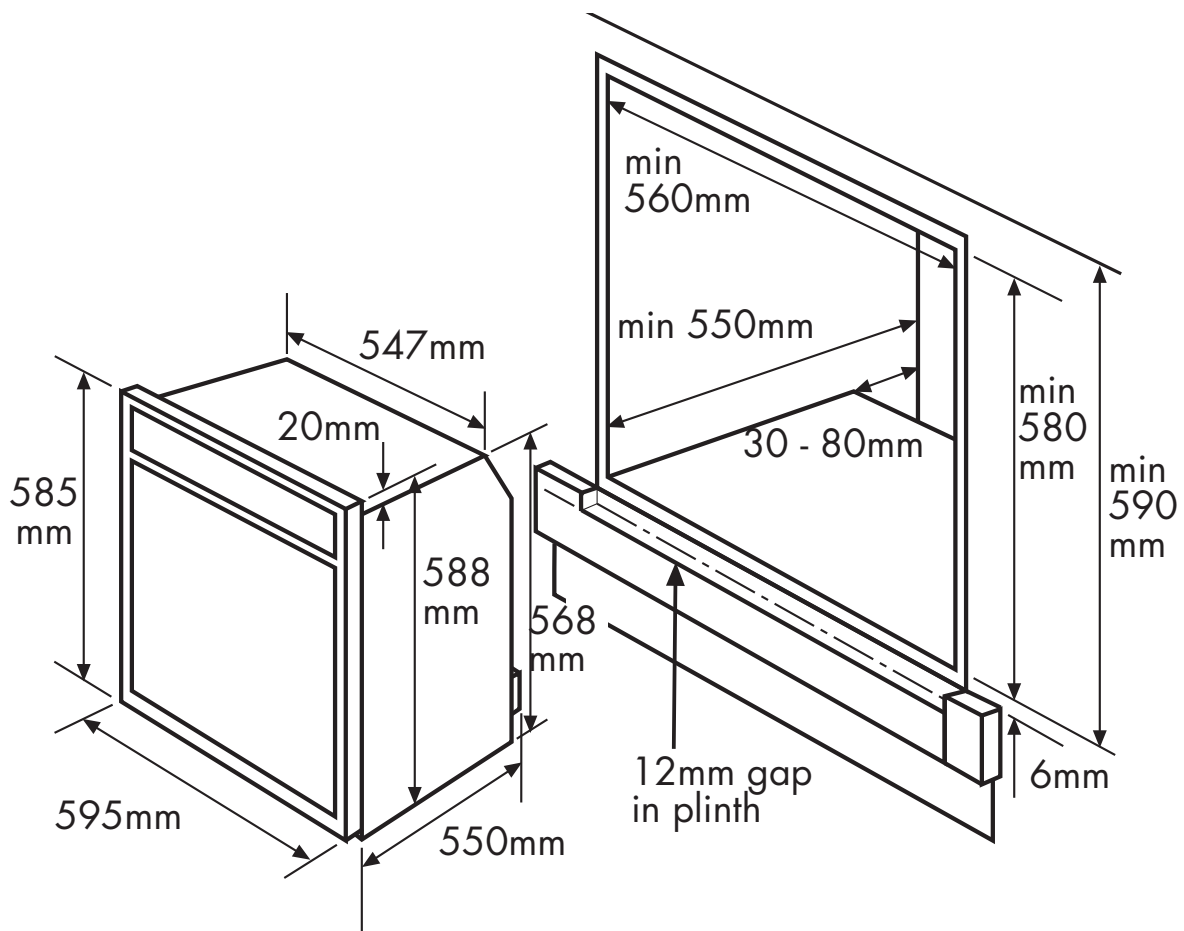

## Step 2: Check edging strip

The edging strip is factory fitted to the front side edges of the appliance front frame. This strip provides the cabinetry with extra protection from any escape of heat.


When installing the product, ensure that the edging strip is correctly located on the outer edges of the front frame, before positioning and securing the appliance to the cabinet.

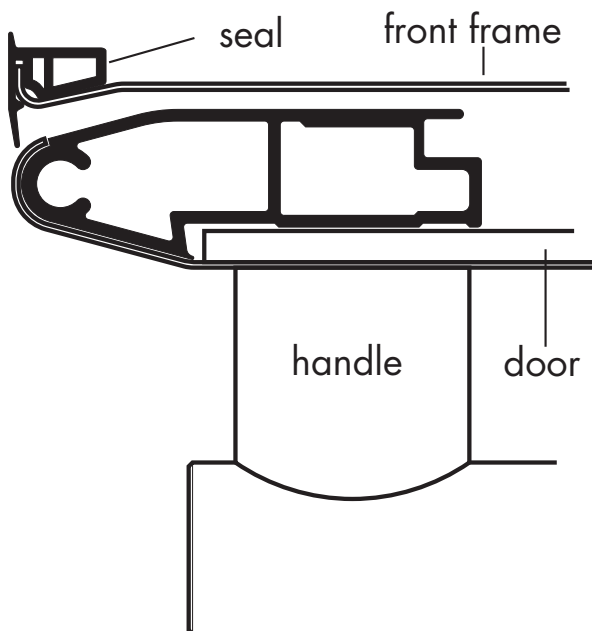

When securing the appliance, the fixing screws provided are driven through the edging strips into the cabinet - the seal will straighten up and sit flush to the cabinet when the screws are fully home.

## Step 3: Secure appliance into housing unit

Insert appliance into cabinet and secure - open the oven door and screw 4 screws through the holes in the front frame.

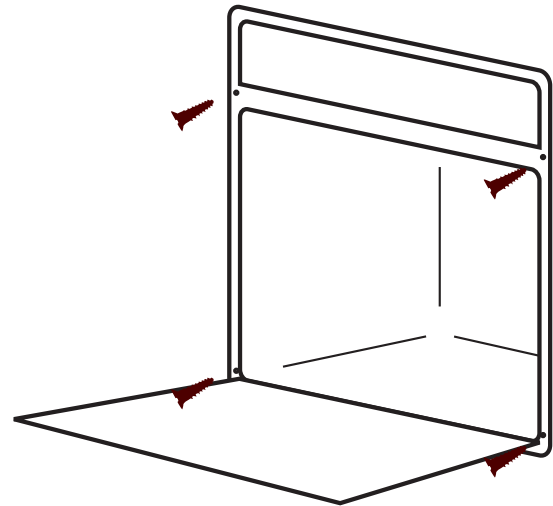

*Note:* The unit housing the appliance must be appropriately fixed.

## **Power Supply**

220 - 240 V ~ 50 Hz - 2.77kW

**Oven lights:** 2 x 25W

## **Connect to the electricity supply**


This appliance must be connected by a competent person, using fixed wiring via a double pole switch with a contact separation of at least 3mm in all poles.

We recommend that the appliance is connected by a qualified electrician, who will comply with the AS/NZS 3000:2000. and local regulations.

1. Access to the mains terminal is gained by opening the terminal block cover at the rear of the appliance (use a small flat-bladed screwdriver).
2. Connect the cable to the terminal block and tighten the cable clamp cover.
3. Close the terminal box, ensuring that the cover is engaged on the locking tabs.

**Warning:** This appliance must be earthed.

Minimum cable thickness must be 6mm<sup>2</sup>.

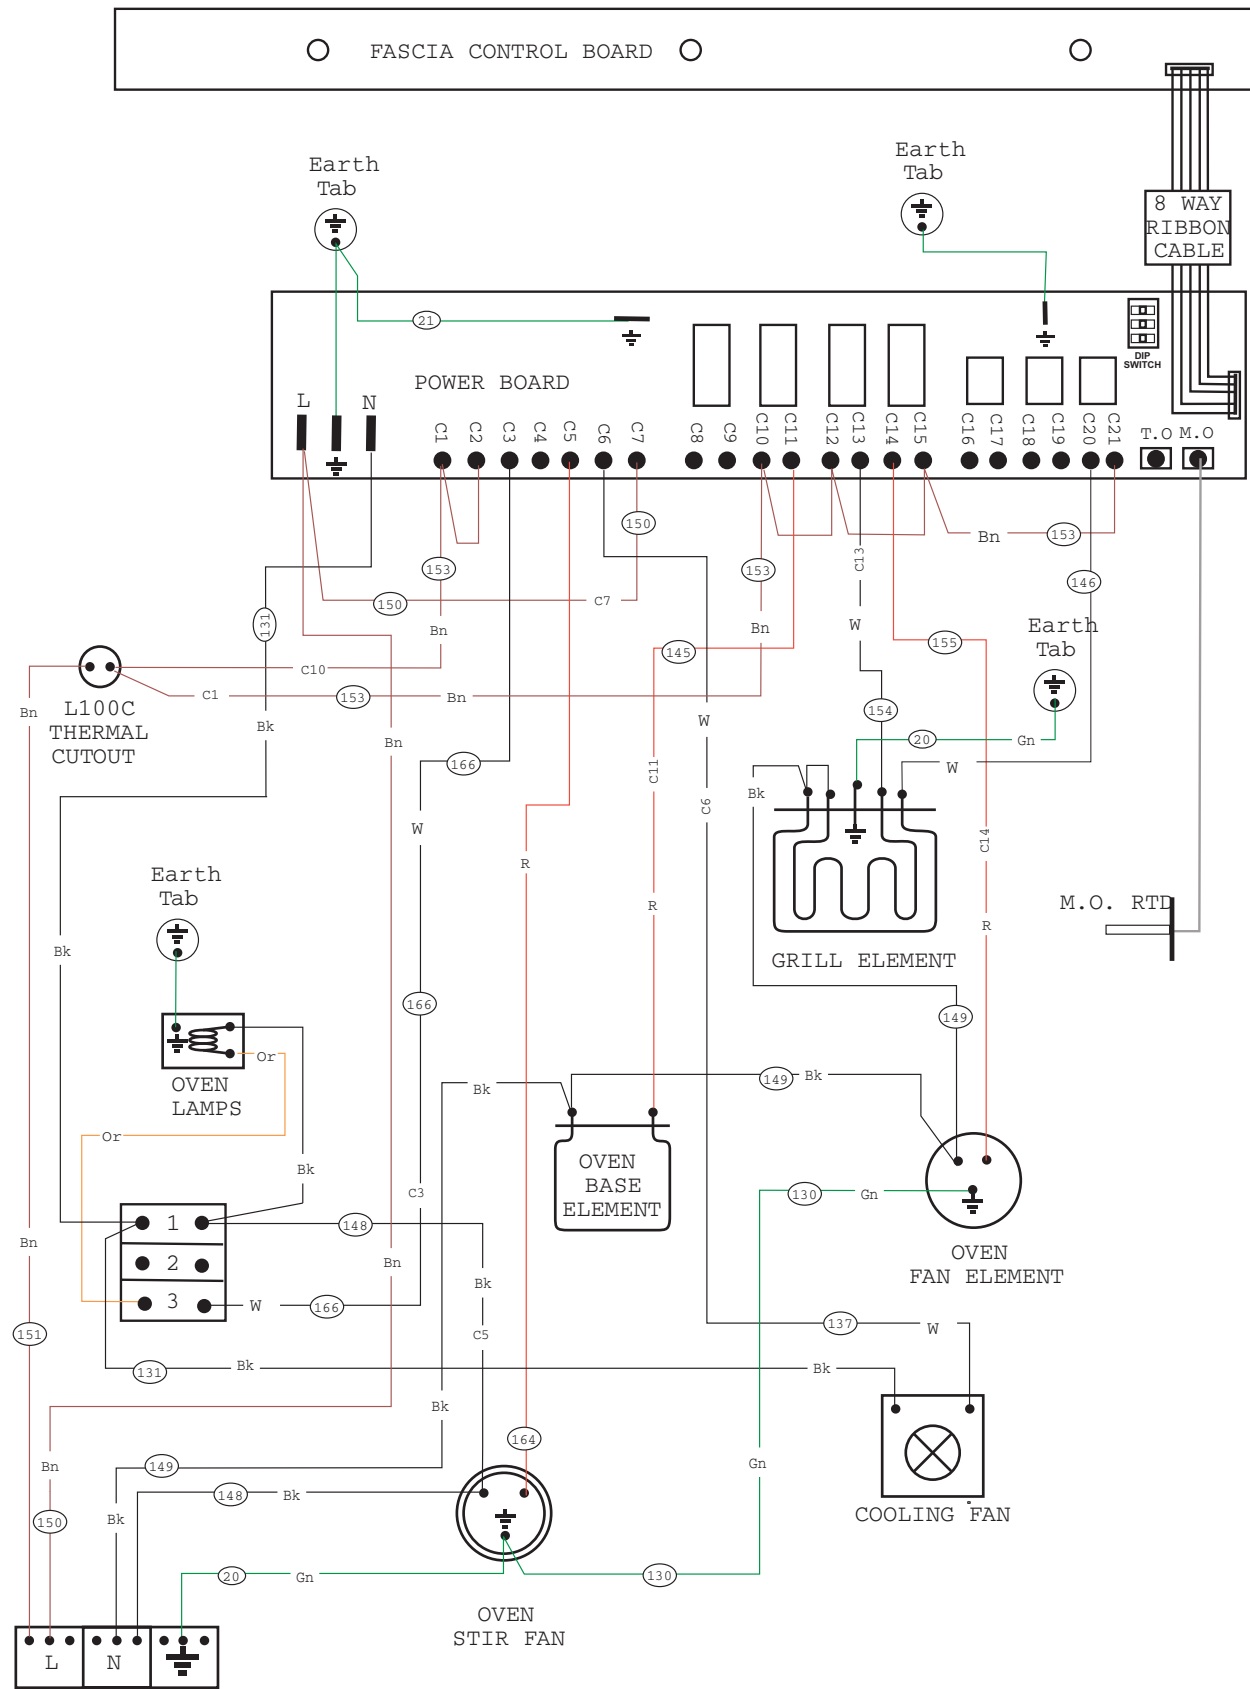

MAINS INLET TERMINAL BLOCK



# Contact Us

---

## Calling for a service

If you should experience any problems with your cooker please contact your retailer or place of purchase.

### Important note:

Service work is to be conducted by authorised persons only. It is also advisable that your cooker is checked regularly and maintained in good condition. An annual maintenance is recommended.

Always check the instruction book before calling a service agent to make sure you have not missed anything.

Glen Dimplex Australia Pty Ltd Customer Care:

**Tel: 1-300-556-816**

Before you contact a service agent, make sure that you have the following information to hand:

Model Number

Serial Number

Date of Purchase

Postcode



Glen Dimplex Australia, Unit 2, 205 Abbotts Road, Dandenong South, Victoria 3175  
Australia

e-mail: [sales@glendimplex.com.au](mailto:sales@glendimplex.com.au)

web: [www.glendimplex.com.au](http://www.glendimplex.com.au)

**08 27314 02 © 03.2008**

**Built In Electric Oven**

**Model Names: 607MF**